



Panel Frame/Bezel O-Ring Installation Instructions

The o-ring should be installed under the panel, in the channel between the frame and case, and must be fully seated to ensure maximum fluid and dust resistance.

Begin installing the o-ring at the top center part of the frame. Stretch it taut towards the top corners and press it firmly into the channel between the frame and case.

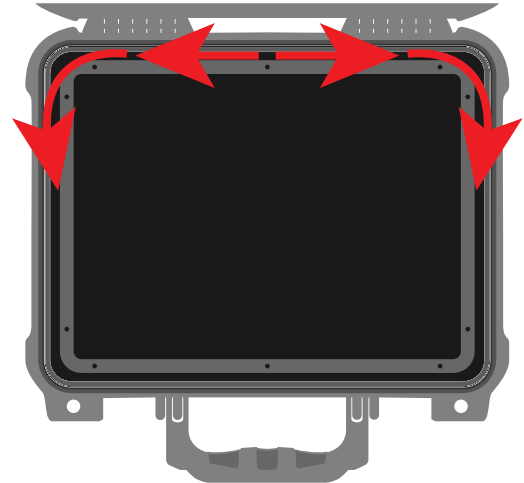

Leaving some slack in the corners, continue to stretch the straight portions down and around the bottom corners of the frame.

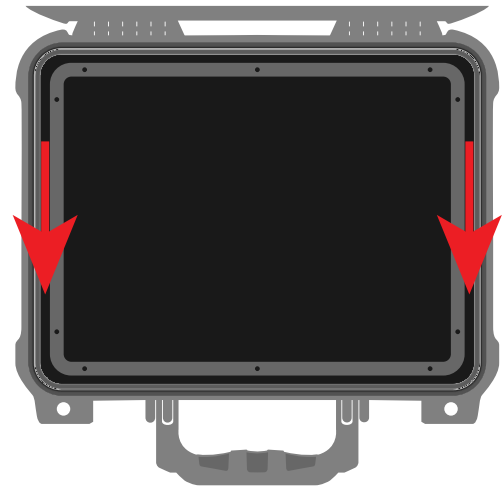

Finish by installing the bottom center portion. In some rare instances it may be necessary to trim the gasket to fit.

